

TCS

MANUAL

Smart Stick PHONE

FFI0001-0000

Smart Stick

1

2

3

4

1

2

3

4

1

2

3

4

1

2

3

4

1

2

3

4

1

2

3

4

Deutsch / English

SCOPE OF DELIVERY

1 x Smart Stick PHONE

1 x Removal tool

NOTES ON THE MANUAL

i

Read through the manual before installation. The manual contains important information on proper use, installation and commissioning. Keep the manual in a suitable place.

i

Please note that communication between the TCS device and the network is only encrypted to a limited extent.

WLAN	802.11 b/g/n (802.11n bis zu 150 Mbps)
Frequency	2.4 ~ 2.5 GHz
Bluetooth	Protokolle: Bluetooth V4.2 BR/EDR und Bluetooth LE Spezifikation Radio: NZIF-Empfänger mit -97 dBm Empfindlichkeit
integrated flash-me-mory	8 MB
operating voltage/pow-er supply	5.0 V ~ 5.2 V
Acceptable ambient temperature	-5 °C bis +40 °C
Dimensions	H 35 x B 26 x T 8 mm

The Smart Stick PHONE connects the TCS indoor station to your home network. Your home network can be supplemented with certain end devices (e.g. IP telephone, IP telephone system or with the snipdoo CLOUD/snipdoo HOME app) and thus connected to your door intercom system.

i

The Smart Stick PHONE is a functional extension that makes structural changes to your TCS indoor station. Talk to the owner before making any changes to the TCS indoor station.

i

The manufacturer accepts no liability for any uses differing from or exceeding the intended use.

SHORT DESCRIPTION

• Configuration via the web interface

• Peer-to-Peer-call diversion via local network

• SIP-call diversion via a SIP-Server

• SIP-Server-Setup-options (Fritz!Box, snipdoo CLOUD, other)

• Automatic firmware updates

• call diversion, door opener, light on, Triggering further control functions

• For a door call: Trigger door opener Button 7, light on button 8 and trigger control function button 5

• Voice message for incoming floor call

DEVICE OVERVIEW

1

2

3

4

1

2

3

4

1

2

3

4

1

2

3

4

1

2

3

4

1

2

3

4

1 Removal tool

2 LED red

3 spring contacts

4 Smart Stick PHONE

TECHNICAL SPECIFICATION

WLAN	802.11 b/g/n (802.11n bis zu 150 Mbps)
Frequency	2.4 ~ 2.5 GHz
Bluetooth	Protokolle: Bluetooth V4.2 BR/EDR und Bluetooth LE Spezifikation Radio: NZIF-Empfänger mit -97 dBm Empfindlichkeit
integrated flash-me-mory	8 MB
operating voltage/pow-er supply	5.0 V ~ 5.2 V
Acceptable ambient temperature	-5 °C bis +40 °C
Dimensions	H 35 x B 26 x T 8 mm

COMMISSIONING

Check compatibility of indoor stations

The Smart Stick PHONE is compatible with the following TCS indoor stations: ISW6031-0145, ISW6010-0145 and Series S70.

i

A QR-code must be displayed on the indoor station. If this is the case, the indoor station is compatible with the Smart Stick PHONE, see illustration.

Check the compatibility of the TCS:BUS system

► Press the **function button** for **8 seconds**, see illustration.

If the LED of the speech button lights up **green**, the Smart Stick **can be used** in the indoor station.

If the LED of the call OFF button lights up **red**, it is **not possible to use** the Smart Stick in the indoor station.

Error	paussible cause	Remedy
LED call OFF button lights up red	inadequate power supply	Check the supply and control unit of the system. A larger or additional supply and control unit may need to be installed.
	Problems in the wiring (2-wire)	Check the wiring of the system.

i

Electrical devices may only be checked by a qualified electrician.

The following technical requirements must also be met for commissioning:

- Fully installed TCS door intercom system with the ISW6031-0145 and/or ISW6010-0145 indoor station or S70 series.
- Maximum distance of 10 m between router and TCS indoor station.
- For configuration: a PC, tablet or smartphone with a connection to the home network

Step 1

Smart Stick PHONE configuration via the SIP server

i

FritzBox: for local call forwarding e.g. FritzPhone or other registered telephone devices. snipdoo CLOUD for snipdoo HOME app, IP telephones or call forwarding to a telephone number.

The Smart Stick PHONE must be configured via the SIP server.

Scan the following QR codes to download the instructions as a PDF or watch a video on the topic.

Example FritzBox:

manual as PDF

video tutorial

Example snipdoo® CLOUD:

manual as PDF

video tutorial

Step 2

Remove dummy insert

Insert the removal tool into the recess below the dummy tray until it clicks into place. Pull out the dummy insert, see illustration.

i

Keep the dummy insert in a safe place for possible dismantling.

Step 3

insert Smart Stick PHONE

Push carefully the Smart Stick PHONE into the slot provided in the indoor station until you feel it click into place. The Spring contacts should point forwards.

The ambient lighting briefly lights up green. The Smart Stick PHONE has been recognised. The Smart Stick PHONE automatically goes into configuration mode. The ambient lighting flashes orange.

i

The Smart Stick PHONE remains in configuration mode for **10 minutes**. Configuration mode is automatically cancelled after **10 minutes**.

i

You can also start configuration mode manually: Press the function button for at least **8 seconds** until the ambient lighting flashes orange and a signal tone sounds.

The Smart Stick switches to configuration mode and enables its WLAN access point.

i

Use the manual configuration mode to reconfigure the Smart Stick.

Step 4

Connecting end devices

Connect your end devices (e.g. PC, tablet and/or SmartPhone) to your access point from the Smart Stick via WLAN.

Enter the default name in the **Name field** and the following password in the **Password field**. The default name and password can be found on the sticker see first page at the bottom left of the document.

The configuration page opens automatically in your browser.

i

If the configuration page does not open automatically, please enter the following address in your browser:

„stick.phone“ or
192.168.4.1

Step 5

Configuration of the Smart Stick PHONE web interface

Scan the following QR codes to download the instructions and/ or watch a video on the topic.

manual as PDF

video tutorial

Error messages:

Error	Red LED indicator	Remedy
Smart Stick not compatible with the indoor station	LED Smart Stick leuchtet	• Remove the Smart Stick from the indoor station
Smart Stick cannot establish a connection to the WLAN network or the SIP server	Smart Stick LED flashes	• Repeat the steps Insert Smart Stick.
Insufficient power supply	Ambient lighting indoor station lights up red	• Ask your electrical installer

CONFORMITY

CE

Declarations of conformity are available at www.tchsag.de, downloads , trade informatione.

DISPOSAL INFORMATION

Dispose of the device separately from household waste at a collection centre for electronic waste. Contact your local authority for the relevant collection centr..

Dispose of the packaging parts seperatly in collection containers for cardboard and paper or plastic.

WARRANTY

We offer a simplified processing in case of warranty for qualified electricians.

> Please contact the TCS HOTLINE under 4194 9881-188 or hotline@tcsag.de.

>Our standard terms and conditions of sale you'll find under- www.tcsag.de, Downloads as well as our current product catalogue.

SERVICE

Please send your questions and inquiries to TCS HOTLINE 04194 9881-188 or hotline@tcsag.de

TCS TürControlSysteme AG
Geschwister-Scholl-Straße 7
D-39307 Genthin
Telefon: +49 3933 8799-10
Fax: +49 3933 8799-11
www.tcsag.de

TCS Österreich GmbH
Gewerbepark 21
A-2821 Lanzenkirchen
Telefon: +43 2627 45266-0
Fax: +43 2627 45266-20
www.tcs-austria.at

Printout: 02/2024 | Subject to technical changes. HB_FFI0001-0000 1 A